Shin Kwang Co.,Ltd.

ART WORK SPEC

작업내용 : REV UP, 컨텍수정					
디자인담당자	임소영 주임	개발담당자	박민호 선임	사업부	청소기 사업부
규 격 (mm) : 105×150	재 질 : 표지: 80뉴플러스 내지: 80뉴플러스		코팅 : 코팅없음	모델명/PJT	REB-PJT
전체 페이지 : 16P	인쇄도수 : 표지: 먹색1도 내지: 먹색1도		A'SSY :	코드번호	DJ68-00341C
개발구분 : 변경 / 신규	후 가 공 : 중철 / 무선철 / 접지 / 간지 / 기타			REV NO	04 ---> 05

디자인 작업 완료일 2010.02.23

Graphic Design Section

SAMSUNG

Operating Instructions

VACUUM CLEANER

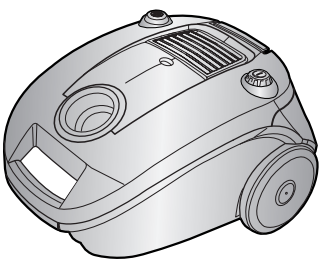

❊ Before operating this unit, please read the instructions carefully.
❊ For indoor use only.

Register your product at www.samsung.com/register

DJ68-00341C REV(0.5)

IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.

2. WARNING: Do not use the vacuum cleaner when rug or floor is wet.
   Do not use to suck up water.

3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

4. Do not use the vacuum cleaner without a dust bag. Replace the dust bag before it is full in order to maintain the best efficiency.

5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.

6. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put a weight on the hose. Do not block the suction or the exhaustion part.

7. Switch the vacuum cleaner off at the machine before unplugging from the electrical outlet. Do not pull on the cord to disconnect the plug from the electrical outlet. Ensure that it is disconnected before attending to the filter.

8. The plug must be removed from the socket out-let before cleaning or maintaining the appliance.

9. The use of an extension cord is not recommended.

10. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.

11. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

12. The vacuum cleaner is provided with a self-resetting thermal cut-out which automatically shuts off on over-heating. Overheating can be caused by blockage in the filter, nozzle, tube or hose. After removing the cause and allowing the motor to cool, the vacuum cleaner will automatically restart.

1 ASSEMBLING THE CLEANER

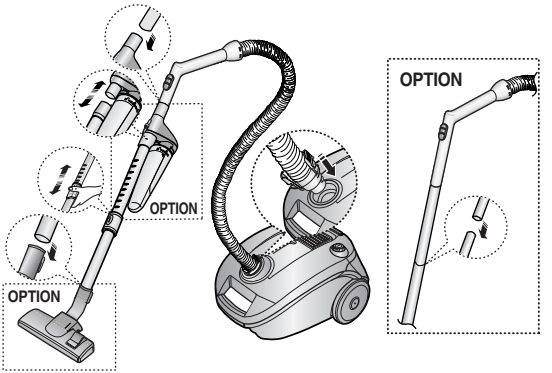

▶ Features may vary according to model.

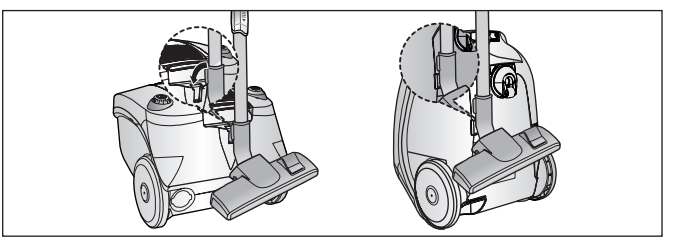

▶ For storage, park the floor nozzle.

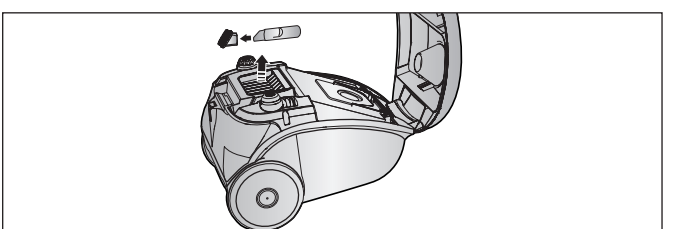

▶ Tool storage

2 OPERATING YOUR CLEANER

2-1 POWER CORD

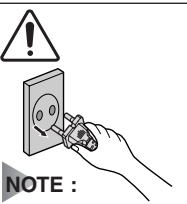

NOTE :

When removing the plug from the socket, please take care to grasp the plug, not the cord in order to avoid undue stress.

2-2 ON/OFF SWITCH

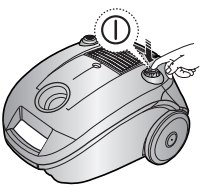

2-3 POWER CONTROL(VOLUME TYPE ONLY)

MIN = For delicate fabrics, e.g. net curtains.

MAX = For hard floors and heavily soiled carpets.

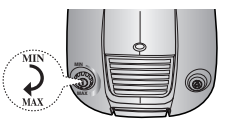

2-4 SUCTION CONTROL

To reduce suction for cleaning draperies, small rugs and other
light fabrics, slide the air vent until the hole is open.

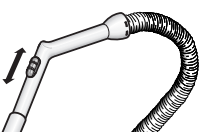

2-5 USING THE BLOWER

Located on the left rear side of the cleaner.

1) Disconnect the hose from the body of the cleaner.
2) Connect the hose clamper to the blow hole.

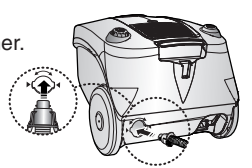

2-6 USING FLOOR TOOLS

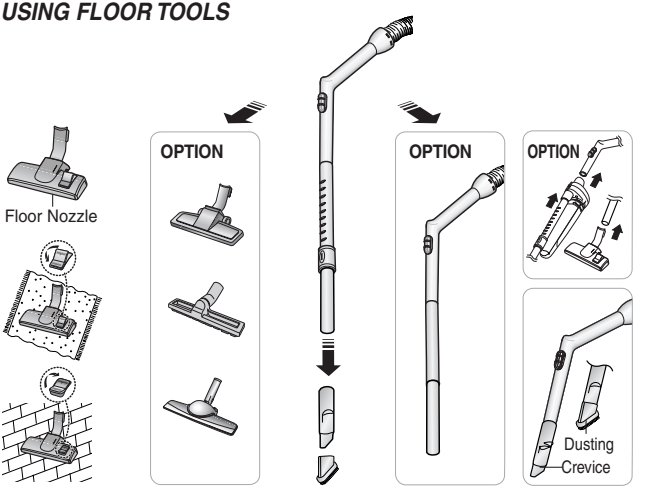

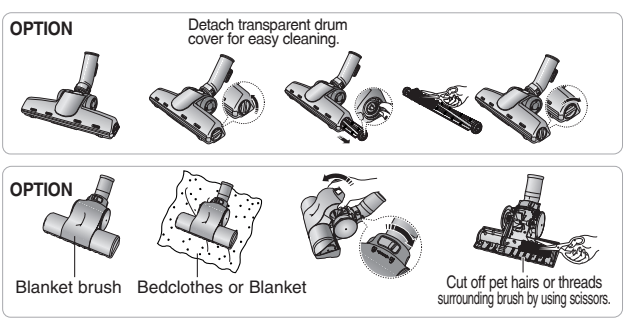
OPTION
Detach transparent drum cover for easy cleaning.
OPTION
Blanket brush
Bedclothes or Blanket
Cut off pet hairs or threads surrounding brush by using scissors.

▶ Features may vary according to model.

DUSTING BRUSH

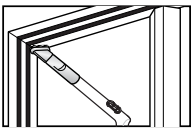

- Dusting brush for furniture. shelves, books, etc.

CREVICE TOOL

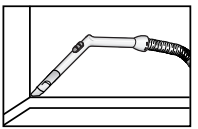

- Crevice tool for radiators, crevices, corners, between cushions.

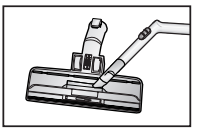

- For efficiency. clean Floor Nozzle with Crevice Tool.

3 INDICATOR LIGHTS

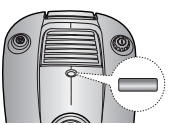

When the indicator color has changed
Please replace the dust bag.

3-1 CHANGING THE DUST BAG

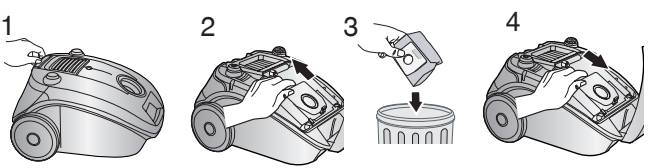

3-2 FOR CLOTH BAG (OPTION)

After using, if the cloth bag is full of dust, clean the cloth bag and use it again.

WARNING : Please do not attempt to operate the cleaner without a dust bag fitted.

4 CYCLONIC FILTER(ONLY CYCLONIC FILTER TYPES)

You can use a dust bag in your cleaner for a long time thanks to the Cyclonic Filter system and it maintain the maximum cleaning efficiency.
The larger particle of dust filtered from Cyclonic Filter remain in Dust Barrel when suctioned air and dust revolves in the Cyclonic Filter. So the dust bag contains only smaller ones.
When the Dust Barrel is filled with dust up to the indicating line, it needs disposing and cleaning. Dust Barrel can be cleaned in water.

1.Turn the Dust Barrel to the left and pull it.
2.Disconnect the Cyclonic Filter from extension wand and handle.
3.Remove thread and hair tangled around the net.
4.After cleaning the Dust Barrel and Cyclonic Filter,connect the Cyclonic Filter with extension wand and handle(washed part should be dried in the shade throughly before assembling).
5.Push and turn the Dust Barrel to the right.
Adjust indicating marks each other carved on Dust Barrel and Cyclonic Filter.

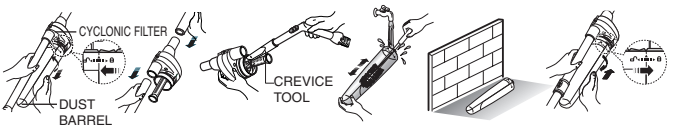

5 CLEANING THE INLET FILTER(OPTION)

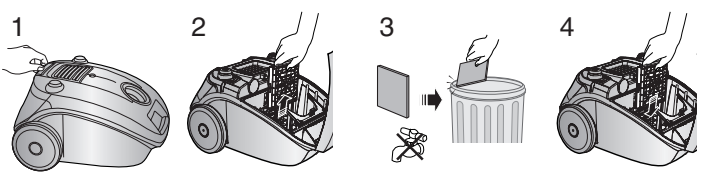

NOTE : Do not allow the filter to become clogged as this may cause power reduction or may damage the motor.

- IF YOU HAVE A PROBLEM

PROBLEM	CAUSE	REMEDY
Motor does not start.	No power supply. Thermal cut-out.	Check cable, plug and socket.Leave to cool.
Suction force is gradually decreasing.	Nozzle, suction hose or tube is blocked.	Remove the object.
Cord does not rewind fully.	Check that the cord is not twisted or wound unevenly.	Pull the cord out 2-3m and push down the cord rewind button.
Vacuum cleaner does not pick up dirt.	Crack or hole in hose.	Check hose and replace if required.

الحلول
سلك التيار

... فقط)

... مدة طويلة وذلك بفضل
... ...
... المصفاة المخروطية
... في المصفاة المخروطية.

أداة الغبار

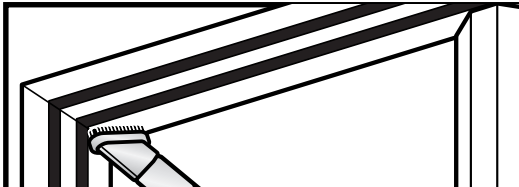

٦-٢ أدوات الأرضية

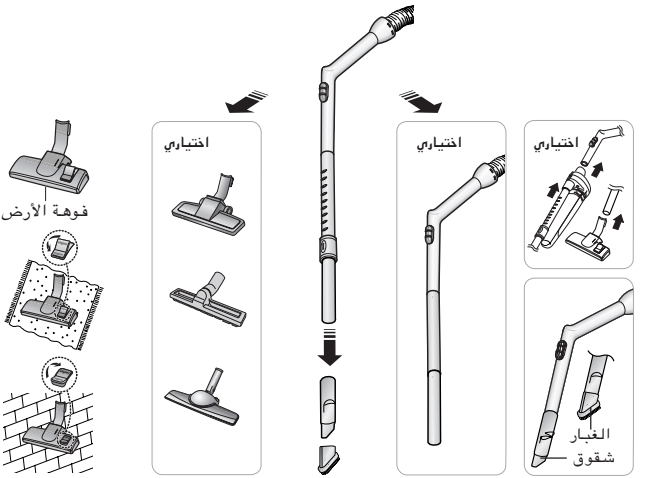

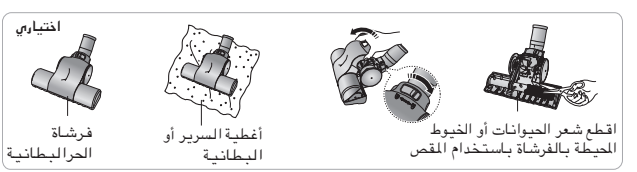

◄ تختلف المزايا حسب موديل الجهاز.

مفتاح التشغيل / الإيقاف

أن الجهد الكهربي
الكهربي
ن المكنسة.

التشغيل